





User-Friendly Basic Low-Profile Scales for General Shipping and Veterinary Applications

The Courier 3000 Series shipping scales' intuitive, user-friendly interfaces, bright displays, and low-profile steel construction ensure durability and reliability from offices to warehouses to even veterinary offices (the Courier 3000 is effective for weighing small animals). Versatile and effective.

Unique Features:


- Ideal for general shipping jobs or veterinary applications. Low-profile design with 1.5 mm thick painted steel platform to last rigorous daily use. Coiled cable ensures flexible display mounting.
- The Courier 3000's Display Hold mode (for use with large boxes and packages) retains weight on the large 28 mm high backlight display, until cleared.
- AC adapter power included, and disposable battery power (not included) for portable use.

COURIER™3000 Shipping Scales

Specifications

Model	i-C31M35R	i-C31M75R	i-C31M200R	i-C31M75L	i-C31M200L	
Capacity × Default Readability	35 kg x 0.02 kg	75 kg x 0.05 kg	200 kg x 0.1 kg	75 kg x 0.05 kg	200 kg x 0.1 kg	
Maximum Displayed Resolution	1:1 750	1:1 500	1:2 000	1:1 500	1:2 000	
Weighing Units	kg, lb					
Application Mode	Weighing, Display Hold					
Display	28 mm digit height, 4-digit, 7-segment LCD with white backlight					
Keyboard	2 mechanical function keys					
Construction	ABS Plastic Indicator Housing Painted steel base - L models with smooth platform, R models with raised, embossed tread					
Cable length	2 m (full extension)					
Stabilization Time	1 second					
Power	AC Power adapter: 100-240VAC ~ 0.5A 50/60Hz; Power output: 5.0 VDC 1.0 A (included) or Dry cell battery: 3 x AA (LR6) Batteries (not included) Battery life: 100 hours continuous use with backlight off					
Operating Temperature Range	-10 °C to 40 °C					
Safe Overload Capacity	150% of capacity					
Platform Dimensions (L x W x H)	329 x 319 x 43.5 mm			520 x 400 x 52.9 mm		
Net Weight	2.7 kg			8 kg		
Shipping Weight	3.4 kg			9 kg		
Shipping Dimensions	395 x 385 x 155 mm			600 x 485	600 x 485 x 100 mm	

Outline Dimensions

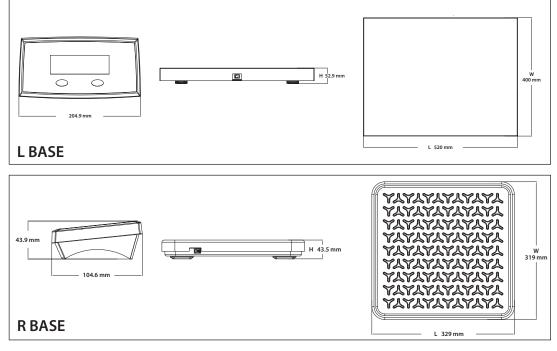

Compliance

- Product Safety: IEC/EN 61010-1; UL certified power supply
- Electromagnetic Compatibility: IEC/EN 61326-1 Class B, basic environments; FCC Part 15 Class A; Canada ICES-003 Class A
- Compliance Marks: CE, UKCA
- Other: WEEE, RoHS

Accessories

OHAUS Europe GmbH

e-mail: ssc@ohaus.com Tel: 0041 22 567 53 19 e-mail: tsc@ohaus.com Tel: 0041 22 567 53 20

www.ohaus.com

80776840_A 20230523 © Copyright OHAUS Corporation

The management system governing the manufacture of this product is ISO 9001:2015 certified.

